# DPTO 22 SNAP PAC S-Series Controllers

# **SNAP PAC S-Series Controllers**

### Features

- Y Powerful standalone industrial controller
- Two 10/100 Mbps Ethernet interfaces for host and I/O communication over standard Ethernet networks
- Wired+Wireless models add wireless LAN network interface as well
- RS-232 and RS-485 serial ports for connection to serial devices, including Opto 22 serial I/O units and PPP host communication.
- Multiple protocol support: TCP/IP, HTTP/HTTPS, EtherNet/IP<sup>™</sup>, Modbus<sup>®</sup>/TCP, SNMP, SMTP, FTP, and OptoMMP<sup>™</sup>
- IIoT and developer ready with a RESTful API to securely access data
- FTP server/client capability; includes file system and removable storage (microSD card)
- Use two identical models for controller redundancy

### Description

A SNAP PAC S-series programmable automation controller (PAC) provides powerful, real-time control and communication to meet your industrial control, monitoring, Industrial Internet of Things (IIoT), and data acquisition needs. As part of the Opto 22 SNAP PAC System, one of these compact, industrially hardened controllers can handle multiple control, automation, and data acquisition tasks involving digital and analog control, serial string handling, PID, and enterprise and Internet connectivity.

Connecting to Opto 22 serial- and Ethernet-based I/O systems, a SNAP PAC S-series controller runs control programs written in Opto 22's PAC Control<sup>™</sup> software to monitor and control a wide range of devices and equipment. SNAP PAC S-series controllers are well suited to original equipment manufacturers (OEMs), system integrators, and end-users in process control, discrete manufacturing, or hybrid industries and applications.

SNAP PAC S-series controllers include a RESTful API (representational state transfer application program interface), so you can use the language of your choice to securely access controller tag data and use it for business purposes.

#### **Ethernet Communication**

All SNAP PAC S-series programmable automation controllers communicate over standard 10/100 Mbps Ethernet networks and can be attached to existing wired or wireless Ethernet networks. The controllers can also be used in an independent



control network built with standard, off-the-shelf Ethernet hardware.

SNAP PAC S-series controllers include two 10/100 Mbps Ethernet interfaces for networking through an Ethernet switch to Ethernet hosts, as well as SNAP PAC brains and I/O, which provide local intelligence and the connections to digital and analog sensors and actuators as well as serial devices. These independent Ethernet ports have separate IP addresses that can be used with PAC Project<sup>™</sup> Professional software to set up redundant network links to safeguard the availability and reliability of an I/O system, or to segment a control system's network from the enterprise LAN.

#### Part Numbers

Part	Description
SNAP-PAC-S1	Ethernet-based programmable automa- tion controller with 2 Ethernet interfaces, RESTful API
SNAP-PAC-S1-FM	Ethernet-based programmable automa- tion controller with 2 Ethernet interfaces, RESTful API, Factory Mutual approved
SNAP-PAC-S1-W	Wired+Wireless Ethernet-based PAC with 2 Ethernet interfaces and a wireless LAN interface, RESTful API
SNAP-PAC-S2	Ethernet-based programmable automa- tion controller with 2 Ethernet interfaces and 4 serial ports, RESTful API
SNAP-PAC-S2-W	Wired+Wireless Ethernet-based PAC with 2 Ethernet interfaces, a wireless LAN interface, and 4 serial ports, RESTful API
SNAP-PSDIN	SNAP-PAC-S1 controller DIN-rail adapter
SNAP-S2DIN	SNAP-PAC-S2 controller DIN-rail adapter

DATA SHEET Form 1584-170105

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com



#### Wired+Wireless Communication

SNAP-PAC-S1-W and SNAP-PAC-S2-W controllers add wireless capability to communications. In addition to the two wired network interfaces, these models have a wireless network interface as well, so each PAC has a total of three separate IP addresses-two wired and one wireless. Wired+Wireless PACs can be used wirelessly or on a wired network, or both at once.

For flexibility in designing your wireless network, wireless communication includes support for 802.11a, b, and g standards. Wired+Wireless PACs can be used with a variety of wireless switches and other infrastructure hardware. For the best security, the 802.11i WPA2/AES standard is supported, while older WPA and WEP security standards are included for backwards compatibility.

Just like a laptop computer with a wireless connection, all functionality remains the same whether the Wired+Wireless PAC is used wirelessly or as part of a wired network. Supported protocols remain the same. Control programs run the same on both networks without reprogramming.

A Wired+Wireless S-series PAC can communicate with both wired and wireless SNAP PAC I/O units. (See "I/O Units Supported" on page 4 for details.) If desired, the PAC can segment a wireless network from a wired one.

#### **Serial Communication**

SNAP PAC S-series controllers provide RS-232 and RS-485 communication as follows:

The SNAP-PAC-S1 and SNAP-PAC-S1-FM have two RS-232 serial ports that support general-purpose communication with serial devices; you can send and receive data from one or two serial devices connected directly to the controller. Port 0 can be connected to a modem using PPP (Point-to-Point Protocol). These controllers also have one pluggable two-wire RS-485 port that can be used for SNAP PAC or mistic serial I/O units. For additional serial interfaces, you can add one or more SNAP serial communication modules on SNAP PAC racks connected to the controller.

The **SNAP-PAC-S2** has four serial ports that can each be configured using PAC Manager as either RS-232 or RS-485

# **SNAP PAC S-Series Controllers**

(2-wire or 4-wire). These serial ports can be used for I/O or for general-purpose serial communication. For the default configuration settings of these ports, see form 1592, SNAP PAC S-series User's Guide.

Configured as RS-232, the ports support remote serial device communication, and any one of the ports can be configured as a PPP modem connection for creating a TCP/IP

> network over PSTN (Public Switched Telephone Network) lines. Configured as RS-485, the serial ports connect to legacy Opto 22 mistic<sup>™</sup> I/O units, including the serial B3000 brain and remote *mistic* bricks, and to SNAP PAC SB-series serial brains.

For additional serial host interfaces, you can add one or more SNAP serial communication modules on attached SNAP Ethernet-based I/O units.

#### **Controller Redundancy**

Two identical SNAP PAC S-series controllers can be used to form a redundant system, where one controller actively runs the control program and the other is ready to take over immediately if the first one should fail.

Besides two identical PACs, a redundant system requires PAC Professional 9.0 or newer (see "Software," below), and the SNAP PAC Redundancy Option Kit. For more information, see form 1901, SNAP PAC Redundancy Option Kit Data Sheet, and form 1831, SNAP PAC System Redundancy User's Guide, both available on our website.

#### **Backward Compatibility**

S-series controllers have RS-485 serial interfaces for connecting to Opto 22's legacy mistic I/O units. The SNAP-PAC-S1 and SNAP-PAC-S1-FM have one RS-485 port, and the SNAP-PAC-S2 can be configured with up to four.

This connectivity with legacy serial-based I/O systems, combined with PAC Control Professional's ability to import control programs (or *strategies*) written in OptoControl software, provides a migration path to integrate older Opto 22 I/O systems into modern control hardware running on Ethernet networks.

For detailed information on updating control strategies and integrating legacy control hardware into modern systems, see form 1692, FactoryFloor to PAC Project Migration Technical Note.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com



#### Software

SNAP PAC controllers use Opto 22's **PAC Project** Microsoft<sup>®</sup> Windows<sup>®</sup>-compatible automation software for control programming, human-machine-interface (HMI) development, and OPC and database connectivity. Two versions of PAC Project are available:

- **PAC Project Basic** includes PAC Control for developing control programs, PAC Display<sup>™</sup> for creating operator interfaces, and PAC Manager<sup>™</sup> configuration software.
- PAC Project Professional adds expanded versions of PAC Control and PAC Display, plus a SoftPAC<sup>™</sup> software-based controller for PC-based control, OptoOPCServer<sup>™</sup> software for exchanging data with OPC 2.0-compliant client software applications, and OptoDataLink<sup>™</sup> for exchanging SNAP PAC System data with ODBC-compliant databases.

Applications included in the PAC Project software suite are:

PAC Control Basic is a graphical, flowchart-based programming tool for machine control and process applications. Using PAC Control, you create, download, and run strategies on a SNAP PAC controller. In addition to flowchart programming with subroutine capability, PAC Control includes a powerful, built-in scripting language based on C and other procedural languages. PAC Control Professional adds capabilities to import OptoControl strategies, to support *mistic* I/O units, and to use a SNAP PAC controller's independent Ethernet ports to segment communication links.

**PAC Display Basic** is an intuitive HMI package for building operator interfaces, or *projects*, for communicating with a SNAP PAC controller. PAC Display offers a full-featured HMI including alarming, trending, and a built-in library of 3,000 industrial automation graphics. **PAC Display Professional** adds the ability to import projects created in OptoDisplay, part of the Opto 22 FactoryFloor<sup>®</sup> software suite, and to use redundant communication links on SNAP PAC controllers. PAC Display Professional can also connect to Ethernet-based FactoryFloor controllers running OptoControl strategies or ioProject controllers running ioControl strategies.

**SoftPAC** is a software-based programmable automation controller (PAC) designed for PC-based control. Programmed just like an Opto 22 hardware PAC, SoftPAC runs your PAC Control strategy independently on an embedded or standalone PC. SoftPAC takes advantage of a PC's speed and file capabilities for applications requiring extended file storage, frequent access to files, math-intensive processes, or a large number of control flowcharts running at the same time. **OptoOPCServer** (PAC Project Professional only) is a fast, efficient OPC 2.0-compliant server for communicating with many Opto 22 products, including SNAP PAC controllers running PAC Control strategies, SNAP PAC brains, SNAP Ultimate controller/brains, SNAP Ethernet and SNAP Simple brains, and Ethernet-based FactoryFloor controllers running OptoControl strategies.

Using OptoOPCServer, you can consolidate data from all these Opto 22 systems into the OPC client software of your choice, such as third-party HMI and data acquisition packages, and custom software applications you create with tools such as Visual C++ $^{\circ}$ .

**OptoDataLink** (PAC Project Professional only) transparently provides multiple connections for data exchange with popular databases such as Microsoft SQL Server, Microsoft Access, and MySQL. OptoDataLink connects your SNAP PAC system with the tools used for making business decisions, bringing real-time, accurate data to decision makers.

**PAC Manager** is a utility application for assigning IP addresses to SNAP PAC controllers and brains, reading or changing basic controller configuration, upgrading firmware, and inspecting or testing controllers and I/O.

#### Software Availability

PAC Project Basic is included with SNAP PAC controllers and is a free download from the Opto 22 website. PAC Project Professional is available for purchase. You can also separately purchase PAC Control Professional, PAC Display Professional, SoftPAC, OptoOPCServer, and OptoDataLink as needed. For additional information, see form 1699, *PAC Project Data Sheet*.

#### **RESTful API**

Ready for the Industrial Internet of Things (IIoT)? Need to use controller data for business purposes? Your SNAP PAC controller's built-in RESTful application program interface (API) lets you exchange data easily using the architecture of the Internet and the language of your choice.

You can query PAC Control strategy tags with HTTPS (Basic Auth) using your favorite programming language—PHP, .NET, Node.js, Python, or others. Tag data from I/O points and controller variables is returned as JSON.

You can set up authentication keys with permissions for either read-only or read-write, as necessary for your application. The RESTful API is included in SNAP PAC firmware R9.5a and PAC Project 9.5 (or higher). See developer.opto22.com for complete information.

 DATA SHEET

 Form 1584-170105

 PAGE

 3

#### I/O Units Supported

S-Series Controller	On a Wireless LAN	On a Wired Ethernet Network	On a Serial Network
SNAP-PAC-S1 SNAP-PAC-S1-FM SNAP-PAC-S2	none	SNAP-PAC-R1 SNAP-PAC-R1-B SNAP-PAC-R1-FM SNAP-PAC-R2 SNAP-PAC-R2-FM SNAP-PAC-EB1	SNAP-PAC-SB1 SNAP-PAC-SB2 B3000* B3000-B* SNAP-BRS* B100*
SNAP-PAC-S1-W SNAP-PAC-S2-W	SNAP-PAC-R1-W SNAP-PAC-R2-W SNAP-PAC-EB1-W SNAP-PAC-EB2-W	SNAP-PAC-EBT SNAP-PAC-EBT SNAP-PAC-EB2 SNAP-PAC-EB2-FM G4EB2 G4D32EB2-UPG SNAP-UP1-ADS* SNAP-B3000-ENET* SNAP-ENET-D64* SNAP-ENET-S64* SNAP-ENET-RTC*	B100 B200* G4D16R* G4D32RS* G4A8R*

\* Legacy I/O processors; not recommended for new development

#### **Technical Specifications**

Specifications are continued on the following page.

Processor	266 MHz 32-bit ColdFire <sup>®</sup> 5475 with integrated floating-point unit (FPU)	
Memory	SNAP-PAC-S1 and SNAP-PAC-S2 Total RAM: 32 MB Total RAM for PAC Control Strategies: 16 MB Battery-backed RAM: 8 MB RAM File Storage: 2.5 MB Flash File Storage: 4 MB SNAP-PAC-S1-W and SNAP-PAC-S2-W Total RAM: 128 MB Total RAM for PAC Control Strategies: 64MB Battery-backed RAM: 8 MB RAM File Storage: 16 MB Flash File Storage: 4 MB	
Removable storage	(Models with manufacture dates of June 2014 and newer. Requires firmware R9.4a or higher and loader R6.1a or higher) MicroSD card slot: supports microSD or microSDHC cards to 32 GB. (Models with manufacture dates of November 2008 through May 2014 with firmware R8.4 or higher) microSD card slot: supports microSD cards up to 2 GB.	
Backup battery	SNAP-PAC-S1s with serial number 625654 or higher and all SNAP-PAC-S2s: Rechargeable (recharges whenever the brain has power), 1-year power-off data retention (replacement part number: SNAP-PAC-BATTERY-ML2430). SNAP-PAC-S1s with serial number 625653 or lower: User-replaceable 3.6-volt TL 5242 /W lithium, 10-year minimum power-off data retention (replacement part number: G4BATT32).	
Ethernet Communication (wired) to host and I/O	Two independent 10/100 Mbps Ethernet network interfaces (RJ-45 connec- tors). Each interface has a separate IP address (separate subnet).	

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

Form 1584-170105 DATA SHEET

PAGE 4

Ethernet Communication (wireless)*	<ul> <li>Wireless LAN interface with separate IP address.</li> <li>Topologies: Infrastructure, Ad-Hoc</li> <li>Security: 802.11i; AES - Compatible with WPA2 Personal, TKIP - Compatible with WPA Personal, WEP.</li> <li><i>NOTE: TKIP/AES security is not supported in Ad-Hoc mode.</i></li> <li>Frequency 802.11a: 5.180–5.240 GHz, 5.745–5.825 GHz</li> <li>Frequency 802.11b/g: 2.412–2.472 GHz, 2.484 GHz</li> <li>Transmit Power: 15 dBm maximum</li> <li>Antenna Connector: Reverse polarity SMA (RP-SMA or RSMA)</li> <li>Roaming: Supported within an SSID (Service Set Identifier) only</li> </ul>
Serial Communication	SNAP-PAC-S1 RS-232 serial: Two RS-232 serial ports (one DB-9 and one pluggable connec- tor); one port has full handshaking. PPP is supported only on port 0. Buffer size: 512 bytes each for RX and TX. RS-485 serial: One RS-485 serial port (pluggable connector); two-wire RS- 485; optional <i>mistic</i> signal interrupts. Range (serial multidrop): 32 stations maximum on a segment (including PC, controller, and I/O units); up to 3000 ft (914 m) on a segment. Buffer size: 512 bytes each for RX and TX. SNAP-PAC-S2 Four serial ports that can be used as general purpose ports or for serial I/O units; each port is software configurable as either RS-232 (Tx, Rx, COM, DTR, DCD, RTS, CTS) or as RS-485 (2-wire, 4-wire, optional termination, optional biasing); optional <i>mistic</i> signal interrupts. Buffer size: 512 bytes each for RX and TX.
Power requirements	8–32 VDC ±0.5, 11.3 VA maximum (SNAP-PAC-S1 controllers with serial numbers below 500,000 use 8–24 VDC)
Operating temperature Storage temperature Humidity	-20 °C to 60 °C -40 °C to 85 °C 0% to 95% relative humidity, non-condensing
Software PAC Project Basic PAC Project Professional RESTful API**	Includes programming, HMI software, and configuration software; included with purchase of controller. PAC Project Basic plus OPC 2.0-compliant OPC server, OptoControl strategy and OptoDisplay project importing, support for serial <i>mistic</i> I/O units, and Ethernet link redundancy support. Use HTTPS to access data (read/write or read-only) from controller tags using your chosen programming language. Data returned in JSON. More informa- tion at developer.opto22.com
Number of charts that can run simultaneously	32
Other features	Multiple protocol support including TCP/IP, HTTP/HTTPS, FTP, SNMP v2.0c (with firmware 8.2a), Modbus/TCP, EtherNet/IP™, and OptoMMP™ Real-time clock FTP server/client with file system (in RAM and in removable storage) Ethernet link redundancy or network segmenting
Agency certifications	(-W models only) U.S., FCC Part 15 Subpart C; Canada, IC RSS-210 (-FM models only) Factory Mutual approved All models: CE, RoHS, DFARS
Warranty	30 months from date of manufacture
* Deguiree e Mired Mirelees r	model (SNAD BAC S1 W/ or SNAD BAC S2 W/)

**OPTO 22 SNAP PAC S-Series Controllers** 

\* Requires a Wired+Wireless model (SNAP-PAC-S1-W or SNAP-PAC-S2-W)

\*\* Requires firmware R9.5a or higher


PAGE 5

DATA SHEET Form 1584-170105

#### System Architecture

#### SNAP-PAC-S1 Controller and Serial-based I/O Units

The network shown in this diagram requires PAC Control Professional and PAC Display Professional.

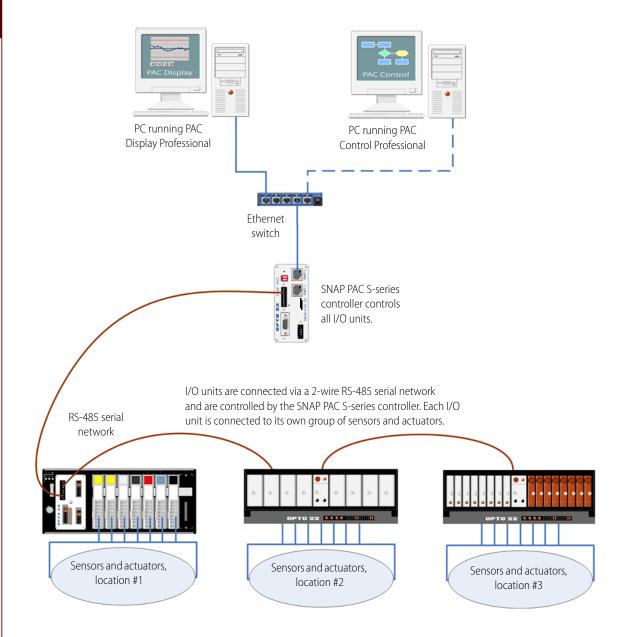

This diagram shows a SNAP PAC S-series controller connected to multiple Opto 22 serial-based I/O units over an RS-485 serial network. The controller is also connected to a larger, separate enterprise Ethernet network to provide process data to a PC running Opto 22's PAC Display HMI software. The diagram also shows a PC running PAC Control Professional; the control program (or *strategy*) that runs on the SNAP controller was developed in this application. Once developed, the strategy is downloaded to the controller and runs independently.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com @ 2006-2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1584-170105


PAGE

6

#### System Architecture (continued)

#### SNAP-PAC-S2 Controller and Serial-based I/O Units

The network shown in this diagram requires PAC Control Professional and PAC Display Professional.

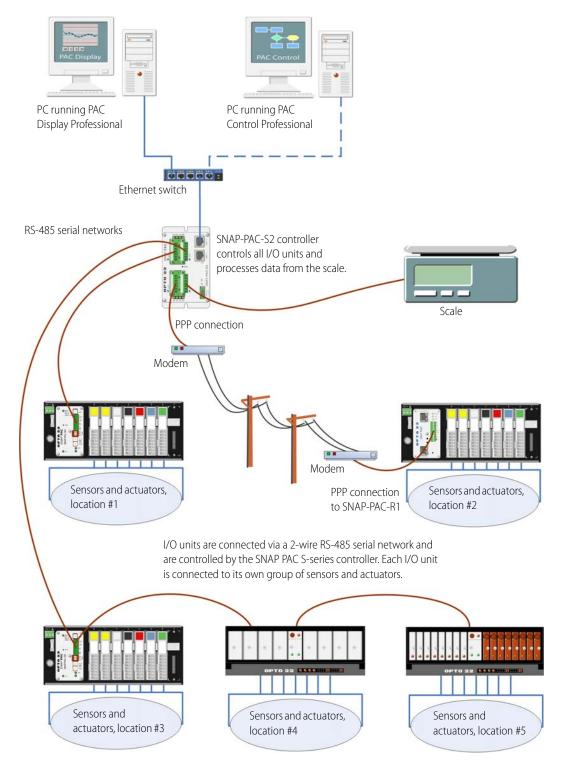

**OPTO 22** SNAP PAC S-Series Controllers

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com


SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1584-170105

#### System Architecture (continued)

#### Wired+Wireless SNAP PAC S-series Controller

The Wired+Wireless PAC can communicate with devices on wired networks, on a wireless LAN, or on both at once. It can also simultaneously communicate serially.

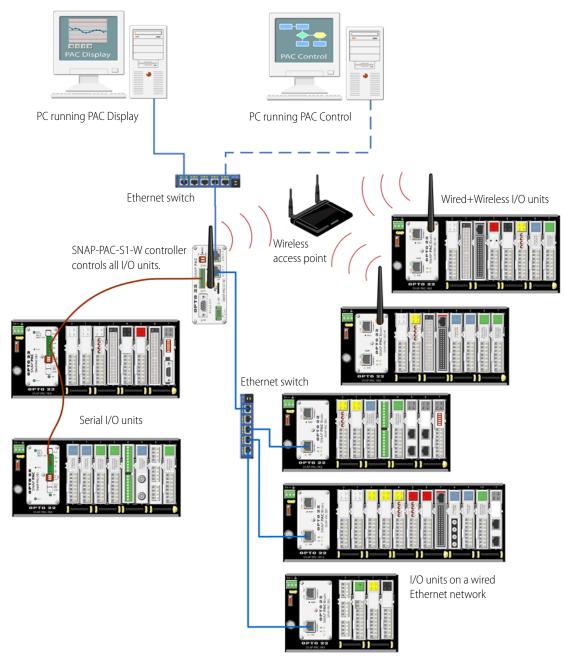

The Wired+Wireless SNAP PAC S-series controller is controlling three groups of I/O units: one group through its serial port, another through a standard 10/100 Mbps interface, and the third over a wireless LAN.

At the same time, the controller is connected to a second wired network for communication with PCs running PAC Control and PAC Display.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.


Form 1584-170105 DATA SHEET

PAGE 8

#### System Architecture (continued)

#### **SNAP PAC S-series Controller Segmenting Wired Ethernet Networks**

The network shown in this diagram requires PAC Control Professional and PAC Display Professional.

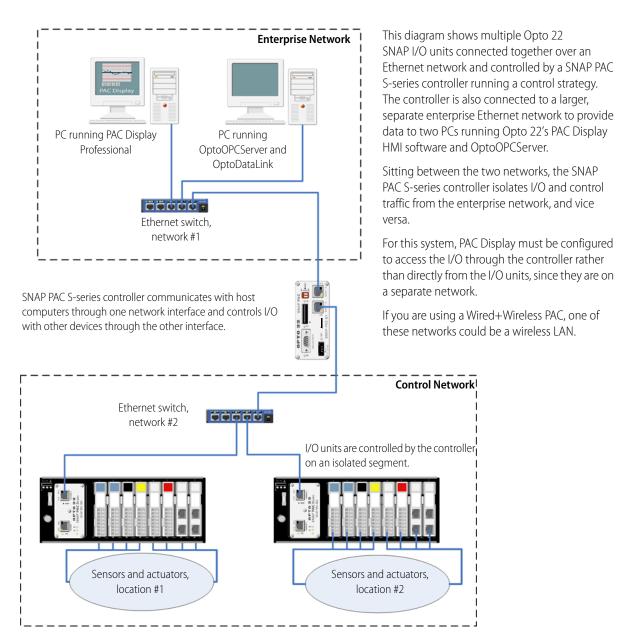

 DATA SHEET

 Form 1584-170105

 PAGE

9

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-2020 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3005 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FAX 951-695-3005 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3005 • galaxies = a sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3000 • FA

#### System Architecture (continued)

#### SNAP PAC S-Series Controller in Redundant Network Configuration

The network shown in this diagram requires PAC Control Professional and PAC Display Professional.

**Opto 22 Redundant Network** PC with two NICs running PAC Display Professional PC with two NICs running OptoOPCServer • **SNAP PAC S-series** controller controls all I/O units. Ethernet switch, Ethernet switch, network #2 network #1 SNAP PAC R-series controller Sensors and actuators location #1 SNAP PAC R-series controller I/O units are all connected by the controller. Each I/O unit is connected to its own group of sensors and actuators, Sensors and actuators. but all are connected to the same two networks. location #2

This diagram shows a SNAP PAC S-series controller connected to two separate Ethernet networks. This configuration addresses the concern that an Ethernet network may fail or need maintenance, leaving the PC running OptoOPCServer, the PC running PAC Display, the controller, and the I/O units unable to communicate.

In this configuration, if one network goes down, devices can still communicate on the other. Each PC has two network interface cards (NICs), and the SNAP PAC S-series controller and the I/O units (SNAP PAC R-series) have two network interfaces as well.

If you are using Wired+Wireless PACs, one of these networks can be a wireless LAN.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

© 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1584-170105


PAGE

10

#### System Architecture (continued)

#### **SNAP PAC S-series Redundant Controllers**

Controller redundancy requires PAC Project Professional 9.0 or newer.

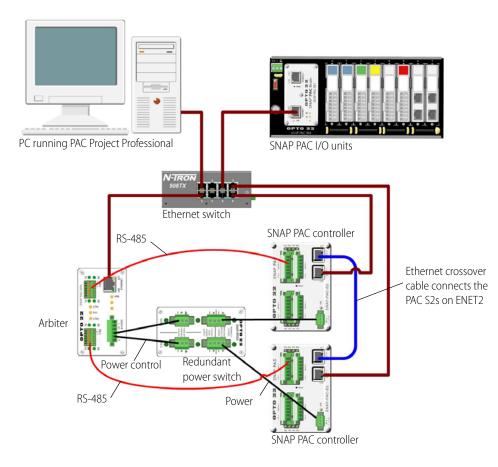

In this diagram, two S-series controllers are operating redundantly. One is the active controller, while the other acts as a backup, ready to take over should the first one fail.

Controller redundancy requires PAC Project Professional 9.0 or newer and the Redundancy Option Kit, which includes the arbiter and the redundant power switch in this diagram. PAC Redundancy Manager, a software utility for setting up and maintaining the system, is included in PAC Project Pro. The two controllers you use must be exactly the same part number (for example, two SNAP-PAC-S2 controllers or two SNAP-PAC-S1-W controllers).

One advantage of an Opto 22 redundant system is that it uses standard PACs, standard cabling, and standard I/O. Another advantage is that either controller can act as the active or backup controller; you can switch their roles at any time for maintenance, for example.


For detailed information on redundancy, see form 1831, *SNAP PAC System Redundancy User's Guide*.

DATA SHEET Form 1584-170105 PAGe

11

#### **SNAP-PAC-S1 Connectors and Indicators**

This diagram applies to both the SNAP-PAC-S1 and the SNAP-PAC-S1-FM.

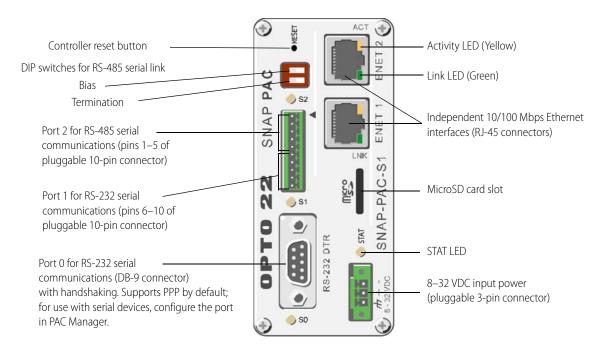

#### **Status and Activity LEDs**

Indicator	Description
S0	RS-232 serial activity on port 0
S1	RS-232 serial activity on port 1
S2	RS-485 serial activity
STAT	Startup status and control program oper- ational status
ACT	Ethernet network activity
LINK	Link established with Ethernet network

#### Port 0 for RS-232 serial (DB-9 connector)

Pin	Description	Signal Direction	
1	DCD	In	
2	RX	In	
3	TX	Out	
4	DTR	Out	
5	COM		
6	DSR	In	
7	RTS	Out	
8	CTS	In	
9	RI*	In	
* DL sinn al da sa nationana			

\* RI signal does not occur on PACs with a microSD card slot

#### Ports 1 and 2 for RS-485 and RS-232 seria

	Pin	Description	Signal Direction
rial	1	TX/RX+	In/Out
5 se	2	TX/RX–	In/Out
5-48 ire)	3	SIG COM*	
r R8	4	IRQ+	In
Port 2 for RS-485 serial (2-Wire)	5	IRQ-	In
rial	6	TX	Out
2 se	7	RX	In
-23	8	GND	
r RS	9	RTS	Out
Port 1 for RS-232 serial	10	стѕ	ln


\* Isolated ground

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com

© 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

#### SNAP-PAC-S1-W Connectors and Indicators (Wired+Wireless)

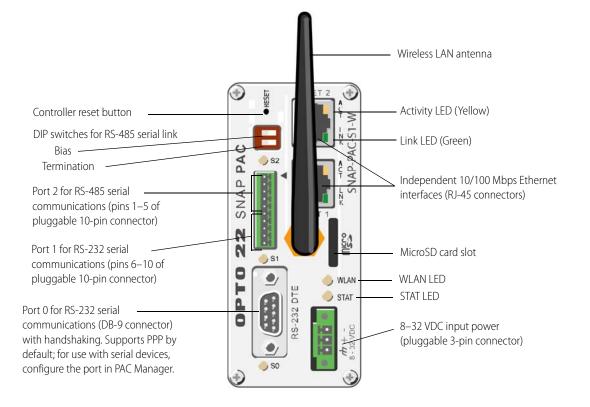

#### **Status and Activity LEDs**

LED	Description
	Decemption
S0	RS-232 serial activity on port 0
S1	RS-232 serial activity on port 1
S2	RS-485 serial activity
STAT	Startup status and control program operational status
ACT	Ethernet network activity
LINK	Link established with Ethernet net- work
WLAN	Wireless LAN status

#### Port 0 for RS-232 serial (DB-9 connector)

Pin	Description	Signal Direction		
1	DCD	In		
2	RX	In		
3	TX	Out		
4	DTR	Out		
5	COM			
6	DSR	In		
7	RTS	Out		
8	CTS	In		
9	NC*			
* No connection				

\* No connection

#### Ports 1 and 2 for RS-485 and RS-232 seria


Pin	Description	Signal Direction
1	TX/RX+	In/Out
2	TX/RX–	In/Out
3	SIG COM*	
4	IRQ+	In
5	IRQ-	In
6	ΤX	Out
7	RX	In
8	GND	
9	RTS	Out
10	CTS	In
	1 2 3 4 5 6 7 8 9	1         TX/RX+           2         TX/RX-           3         SIG COM*           4         IRQ+           5         IRQ-           6         TX           7         RX           8         GND           9         RTS

DATA SHEET Form 1584-170105

PAGE

13

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

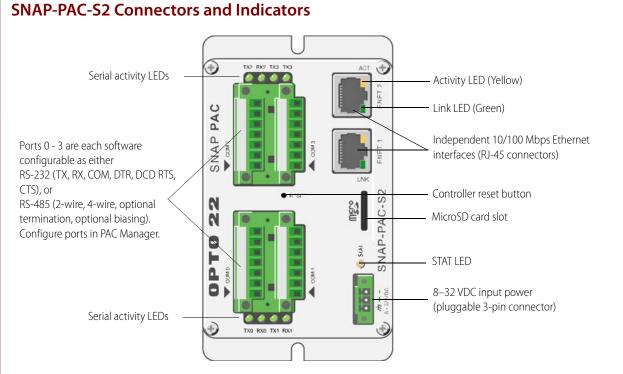

#### RS-485 and RS-232 Ports<sup>1</sup>

Pin	RS-232	Signal Direction	RS-485	Signal Direction
1	ΤX	Out	TX/RX+	In/Out
2	RX	In	TX/RX–	In/Out
3	COM <sup>2</sup>		COM <sup>2</sup>	
4	RTS	Out	RX+ (4 wire)	In
5	CTS	In	RX- (4 wire)	In
6	DTR	Out	IRQ+	In
7	DCD	In	IRQ-	In

<sup>1</sup> CAUTION: Do not use communication port connectors from a legacy OptoControl controller\*. Legacy connectors will fit in a SNAP-PAC-S2, but the pin orientation is different. Instead, use the connectors supplied with the SNAP-PAC-S2 controller.

<sup>2</sup> Isolated ground. (Each channel is isolated from the others.)

\*Legacy OptoControl Controllers:

G4LC32	G4LC32ISA-LT	M4RTU
G4LC32SX	M4	SNAP-LCM4
G4LC32ISA	M4IO	SNAP-LCSX/PLUS

#### **Status and Activity LEDs**


Indicator	Description
TX0/RX0	Serial activity on port 0
TX1/RX1	Serial activity on port 1
TX2/RX2	Serial activity on port 2
TX3/RX3	Serial activity on port 3
STAT	Startup status and control program operational status
ACT	Ethernet network activity
LINK	Link established with Ether- net network

E Opto 22 • 43044 Business Park

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com @ 2006-2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

14 DATA SHEET Form 1584-170105

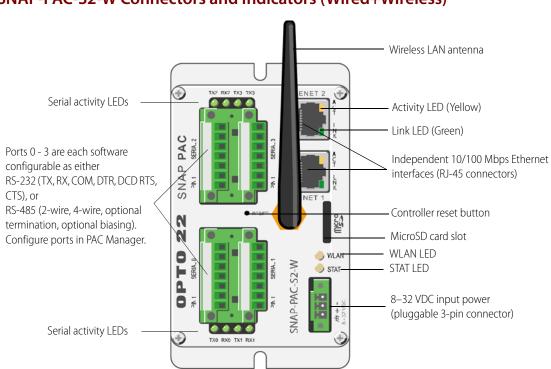

#### SNAP-PAC-S2-W Connectors and Indicators (Wired+Wireless)

#### RS-485 and RS-232 Ports<sup>1</sup>

Pin	RS-232	Signal Direction	RS-485	Signal Direction
1	ТΧ	Out	TX/RX+	In/Out
2	RX	In	TX/RX–	In/Out
3	COM <sup>2</sup>		COM <sup>2</sup>	
4	RTS	Out	RX+ (4 wire)	In
5	CTS	In	RX- (4 wire)	In
6	DTR	Out	IRQ+	In
7	DCD	In	IRQ-	In

<sup>1</sup> CAUTION: Do not use communication port connectors from a legacy OptoControl controller\*. Legacy connectors will fit in a SNAP-PAC-S2, but the pin orientation is different. Instead, use the connectors supplied with the SNAP-PAC-S2 controller.

<sup>2</sup> Isolated ground. (Each channel is isolated from the others.)

\*Legacy OptoControl Controllers:

G4LC32	G4LC32ISA-LT	M4RTU
G4LC32SX	M4	SNAP-LCM4
G4LC32ISA	M4IO	SNAP-LCSX/PLUS

#### **Status and Activity LEDs**

Indicator	Description
TX0/RX0	Serial activity on port 0
TX1/RX1	Serial activity on port 1
TX2/RX2	Serial activity on port 2
TX3/RX3	Serial activity on port 3
STAT	Startup status and control program operational status
ACT	Ethernet network activity
LINK	Link established with Ethernet network
WLAN	Wireless LAN status

OPTO

N N

SNAP PAC S-Series Controllers




Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

#### **Dimensional Drawings**

SNAP-PAC-S1 and SNAP-PAC-S1-FM Panel Mounting and **Dimensions** 

For SNAP-PAC-S1-W dimensions, see page 20

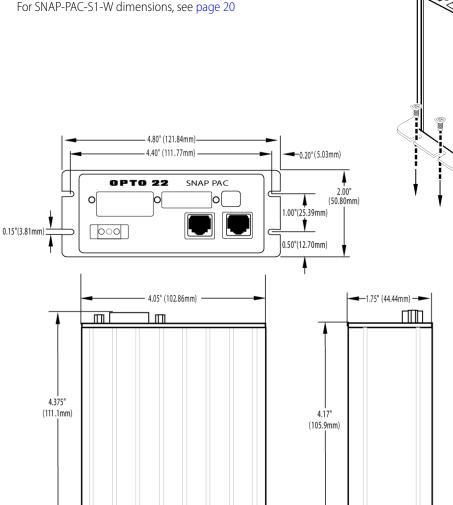


Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006–2017 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

**OPTO 22 SNAP PAC S-Series Controllers** 

Form 1584-170105 DATA SHEET


PAGE 16

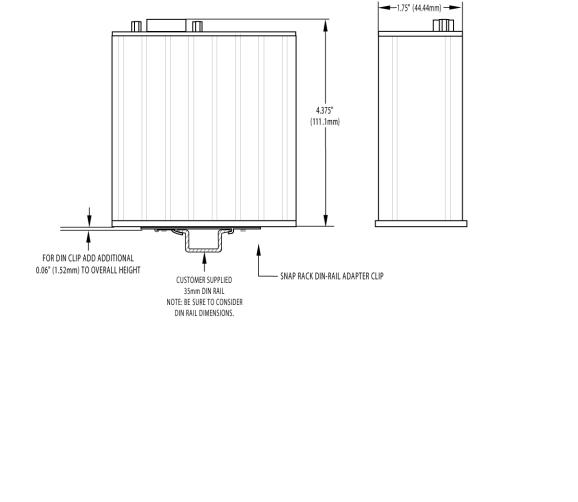



#### **Dimensional Drawings (continued)**

# SNAP-PAC-S1 and SNAP-PAC-S1-FM DIN-Rail Mounting and Dimensions

 
Requires a SNAP-PSDIN adapter (purchased separately).

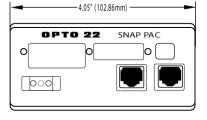

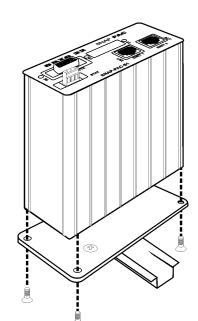




# **SNAP PAC S-Series Controllers**

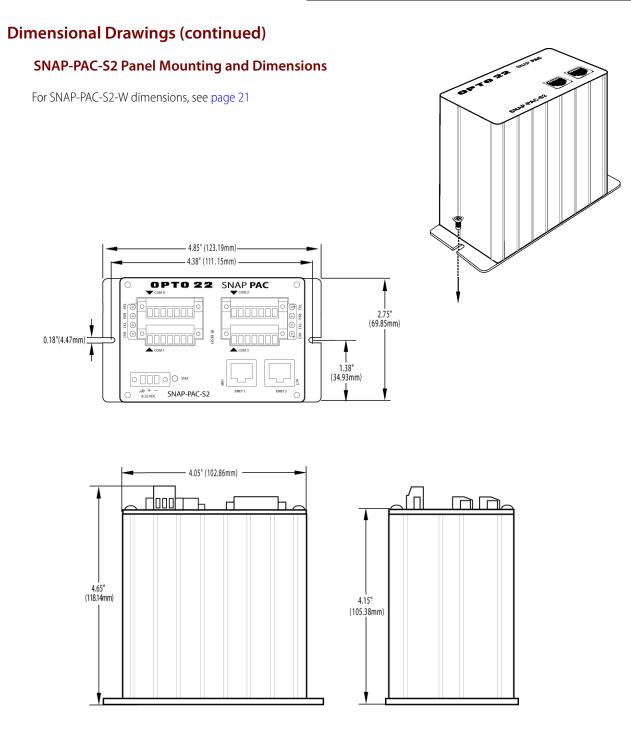



#### **Dimensional Drawings (continued)**


#### **SNAP-PAC-S2 DIN-Rail Mounting and Dimensions**

Requires a SNAP-S2DIN adapter (purchased separately).

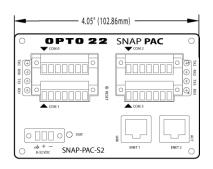

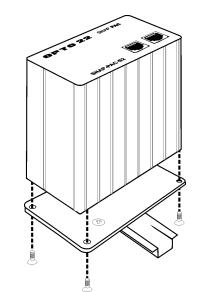

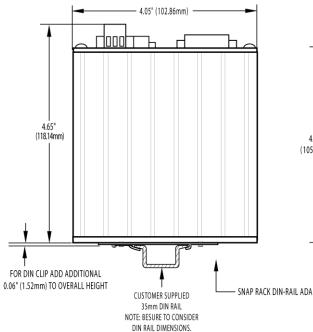

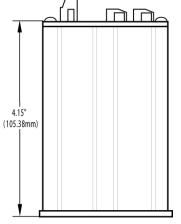


SNAP RACK DIN-RAIL ADAPTER CLIP



#### **Dimensional Drawings (continued)**


#### **SNAP-PAC-S1-W Dimensions**

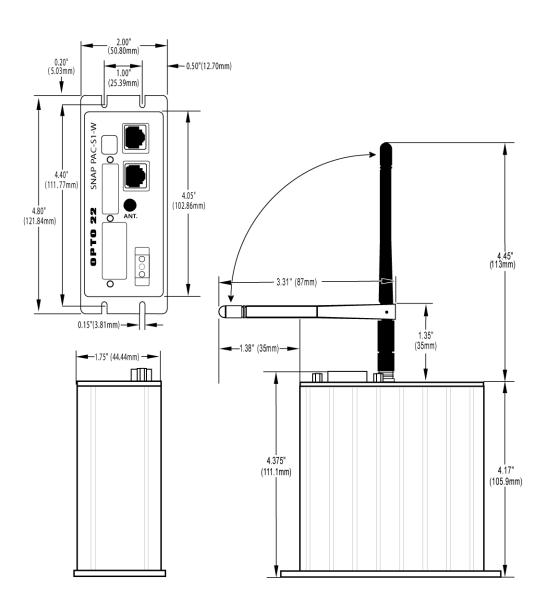



#### **Dimensional Drawings (continued)**

#### **SNAP-PAC-S2-W Dimensions**

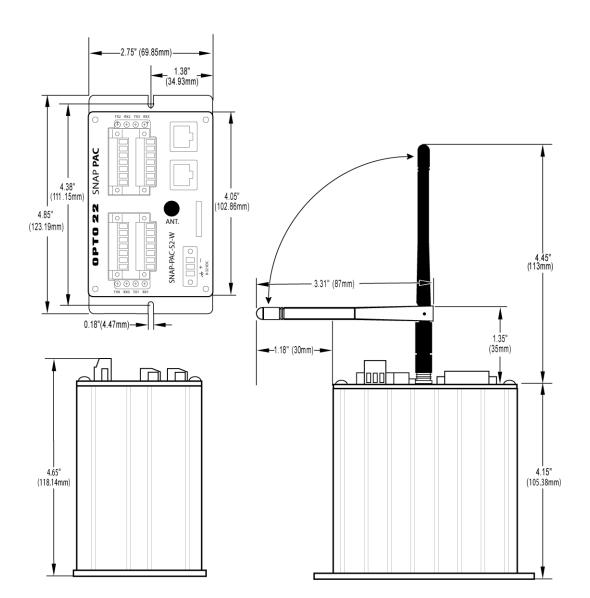

**OPTO 22** SNAP PAC S-Series Controllers

DATA SHEETForm 1584-170105PAGE

21

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

# More About **OPTO** 2

Ŋ

#### Products

Opto 22 develops and manufactures reliable, easy-to-use, open standards-based hardware and software products deployed worldwide.

Industrial automation, process control, building automation, industrial refrigeration, remote monitoring, data acquisition, Industrial Internet of Things (IIoT), and information technology applications all rely on Opto 22.



#### groov

Monitor and control your equipment from anywhere using your smartphone or tablet with groov. Build your own mobile app easily—just drag, drop, and tag. No programming or coding. Visit groov.com for more information and your free trial.

#### **SNAP PAC System**

Developer- and IIoT-ready, the SNAP PAC System connects physical assets to databases and applications using open standards. The SNAP PAC System consists of four integrated components:

- SNAP PAC controllers
- PAC Project<sup>™</sup> Software Suite
- SNAP PAC brains
- SNAP I/O<sup>™</sup>

#### **SNAP PAC Controllers**

SNAP PAC programmable automation controllers handle a wide range of digital, analog, and serial functions for data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

For IIoT applications and easier integration with company systems, standalone and rack-mounted SNAP PACs include a built-in HTTP/HTTPS server and **RESTful API** (application program interface). The REST API gives you secure, direct access to I/O and variable data using your choice of programming languages. No middleware, protocol converters, drivers, or gateways needed.

Based on open Ethernet and Internet Protocol (IP) standards, SNAP PACs make it easier to build or extend a system without the expense and limitations of proprietary networks and protocols.

#### PAC Project Software Suite

Opto 22's PAC Project Software Suite offers full-featured, costeffective control programming, HMI (human machine interface), OPC server, and database connectivity software. Control programming includes both easy-to-learn flowcharts and optional scripting. Commands are in plain English; variables and I/O point names are fully descriptive.

PAC Project Basic offers control and HMI tools and is free for download on our website, www.opto22.com. PAC Project Professional, available for separate purchase, adds one SoftPAC software-based controller, OptoOPCServer, OptoDataLink, options for controller redundancy or segmented networking, and support for legacy Opto 22 serial *mistic*<sup>™</sup> I/O units.

#### **SNAP PAC Brains**

While SNAP PAC controllers provide central control and data distribution, SNAP PAC brains provide distributed intelligence for I/O processing and communications. Brains offer analog, digital, and serial functions, including thermocouple linearization, local PID loop control, watchdog, totalizing, and much more.

#### SNAP I/O

I/O provides the local connection to sensors and equipment. Opto 22 SNAP I/O offers 1 to 32 points of reliable I/O per module. Analog, digital, and serial modules are mixed on one mounting rack and controlled by a SNAP PAC brain or rack-mounted PAC.

#### Quality

Founded in 1974, Opto 22 has established a worldwide reputation for high-quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California.

> Because we test each product twice before it leaves our factory, rather than only testing a sample of each batch, we can guarantee most solid-state relays and optically isolated I/O modules for life.

# Free Product Support

Opto 22's California-based Product Support Group offers free, comprehensive technical support for

Opto 22 products from engineers with decades of training and experience. Support is available in English and Spanish by phone or email, Monday–Friday, 7 a.m. to 5 p.m. PST.

Additional support is always available on our website: how-to videos, OptoKnowledgeBase, self-training guide, troubleshooting and user's guides, and OptoForums.

In addition, hands-on training is available for free at our Temecula, California headquarters, and you can register online.

# **Purchasing Opto 22 Products**

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 (toll-free in the U.S. and Canada) or 951-695-3000, or visit our website at www.opto22.com.

#### www.opto22.com

